


CC: 192 mm

18 mm

SVEDBERGS®

DK Handtag

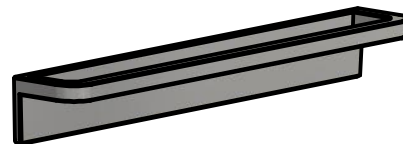

1



Frontpanel
Etupaneeli
Front panel
передняя панель

2



Ø5 mm
Ø7 mm

S

Använd mothåll vid genomborring!

N

Anvend mothold ved genomborring!

DK

Ved gennemboring, hold en traeklods eller lignende på bagsiden!

FI


Käytä läpiporauksessa vastatukea!

GB

When drilling holes, always keep the back of the wood supported!

RU

При сквозном сверлении используйте опору с обратной стороны панели.

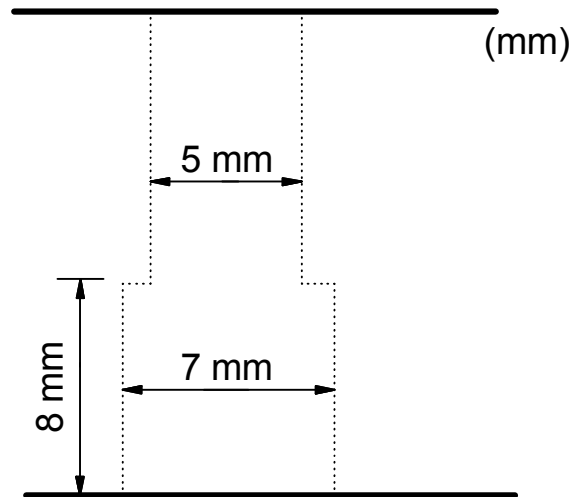

3

